

Quick Start

MailFountain frontside



MailFountain backside




Start here

Follow these instructions to integrate your MailFountain rack version into your Local Network.

First, connect the MailFountain

- 1 Connect the cables between the MailFountain, the computer and your local network as show on schema bellow.
- 2 Power ON the MailFountain.

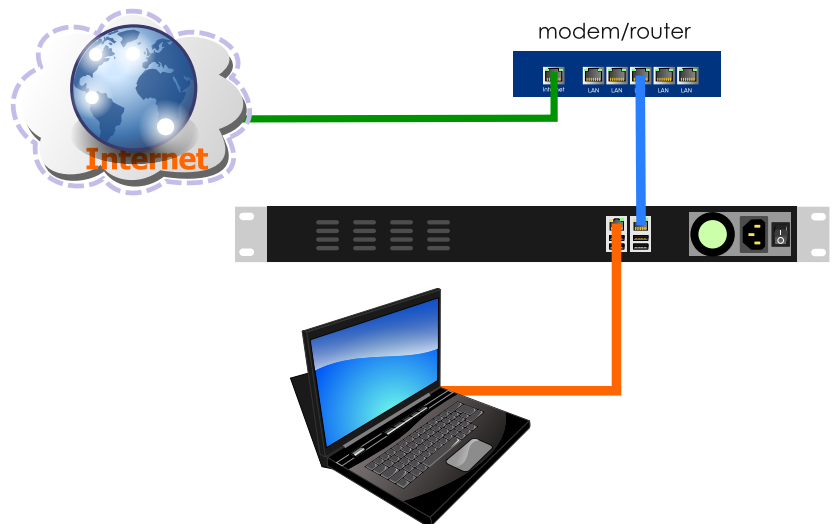

First start connection schema

Configure MailFountain

From the computer connected to MailFountain, open a browser such as Chrome, FireFox, Internet Explorer or Safari, type <http://192.168.1.1> in the browser's address bar.


If you cannot connect to the MailFountain, verify your computer networking setup. Your computer should be set to obtain both IP and DNS server addresses automatically, which is usually so.

Follow with attention the indications of the setup wizard, for the startup of your email server.

Throughout the configuration pages you have the possibility of obtaining more explanation on the suggested choices by clicking on the blue icon with white question mark in it, located beside each choice. You will have 5 pages of configuration to startup your MailFountain. Attentively read the explanations provided on each page.

Notice: The Startup Wizard only appears when the MailFountain configuration is still not yet finish. After you configure the MailFountain, the "Startup Wizard" will not appear again.

You can always connect to the MailFountain to change its settings. To do so, open a browser and go to [http:// + ip_address](http://ip_address) you enter during the network setup. Then, when prompted, enter **admin** as the user name and the password you provided during the Startup configuration. If you forgot the admin password, you can enter the **security code** provided within the "Maintenance information" card.

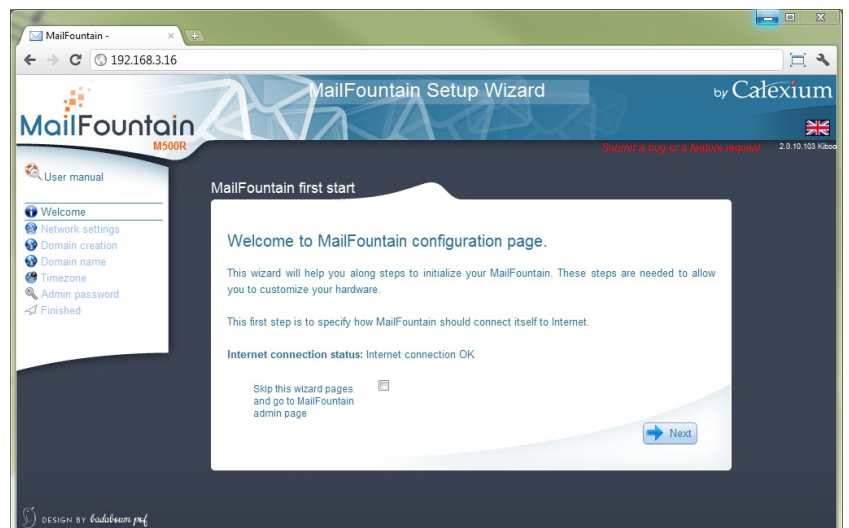

Configuration wizard

